 


MODEL: 50037BH
PACKING DIAGRAM

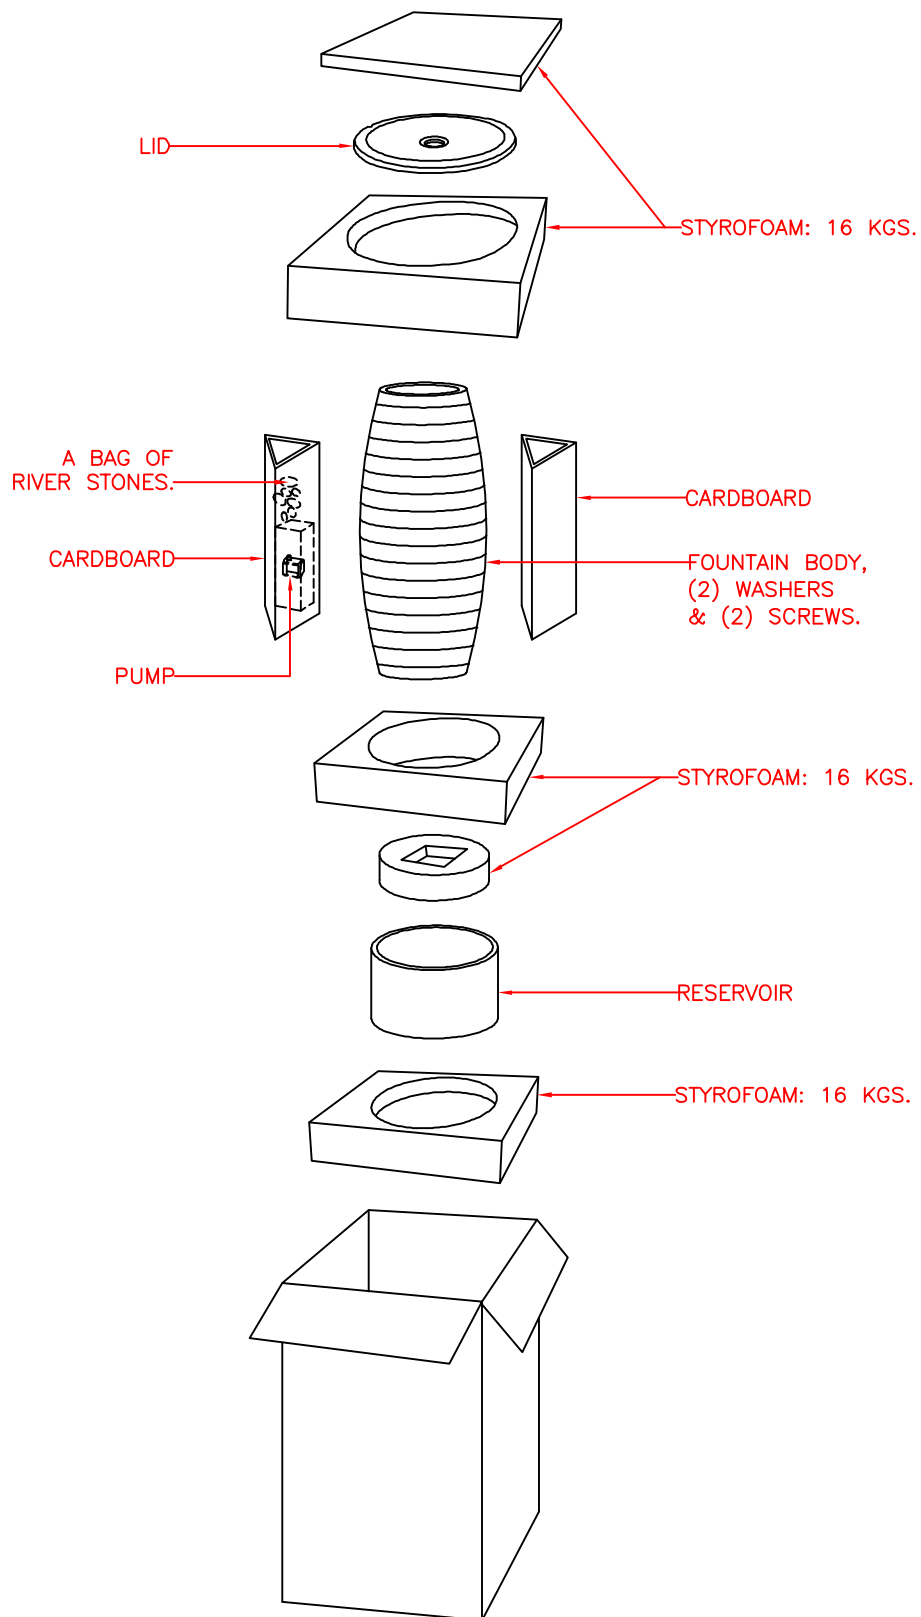

MODEL: 50037BH

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN

 
YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FOUNTAIN BODY, LID, (2) WASHERS, (2) SCREWS, RESERVOIR, PUMP AND A BAG OF RIVER STONES.

TOOLS NEEDED (NOT SUPPLIED):


SCREWDRIVER.

FOUNTAIN ASSEMBLY

1. SECURE THE FOUNTAIN BODY TO LID WITH (2) WASHERS AND (2) SCREWS AS SHOWN.

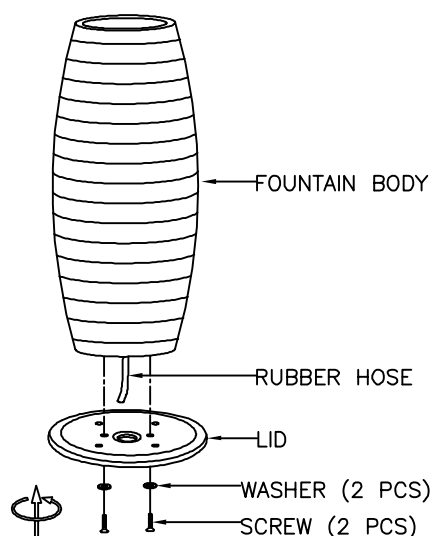


2. ATTACH THE PUMP TO THE RUBBER HOSE.

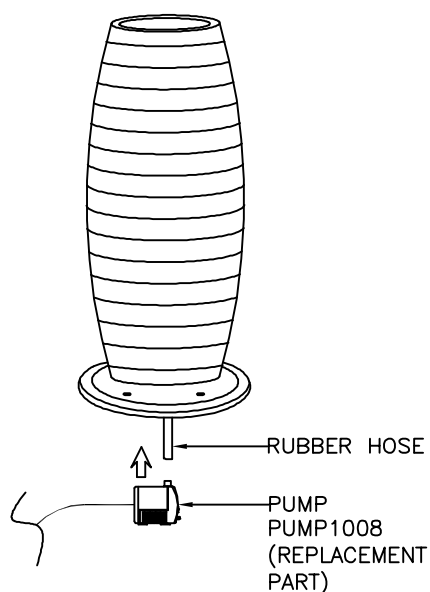 


3. FILL THE RESERVOIR WITH 3.6 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.

 NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

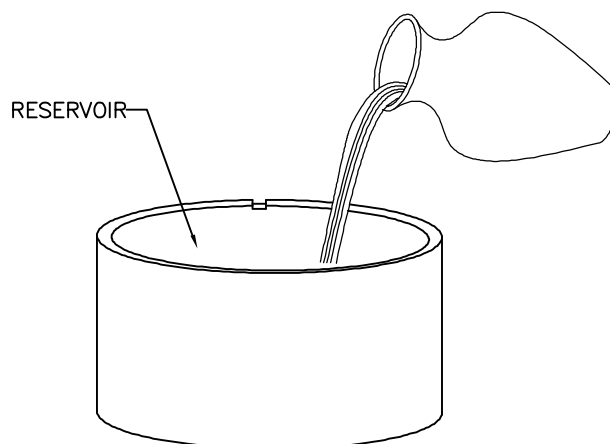

 
4. PLACE THE FOUNTAIN BODY ONTO THE RESERVOIR, MAKE SURE THE PUMP POWER CORD WAS EXITED FROM THE CORD EXIT.

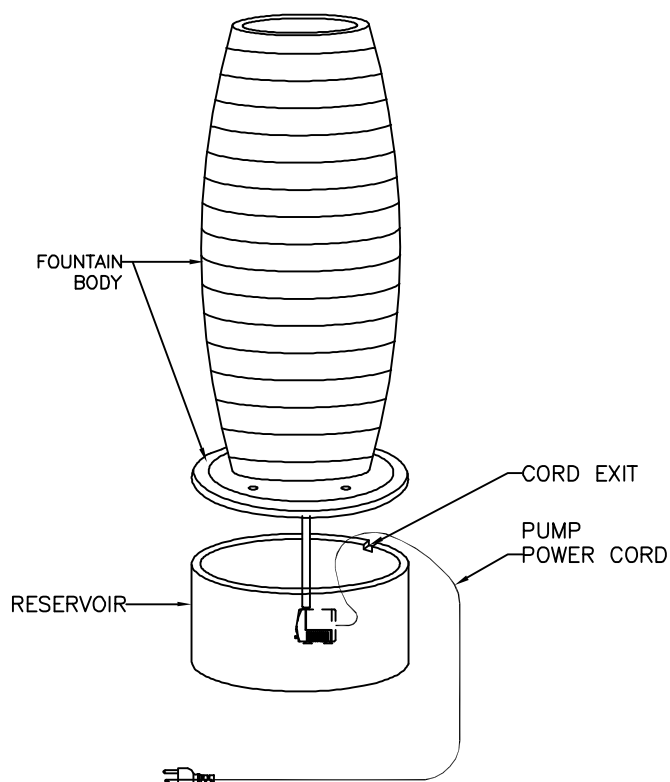

MODEL: 50037BH

ASSEMBLY INSTRUCTIONS

 5. PLACE DECORATIVE RIVER STONES ONTO TOP OF THE LID.

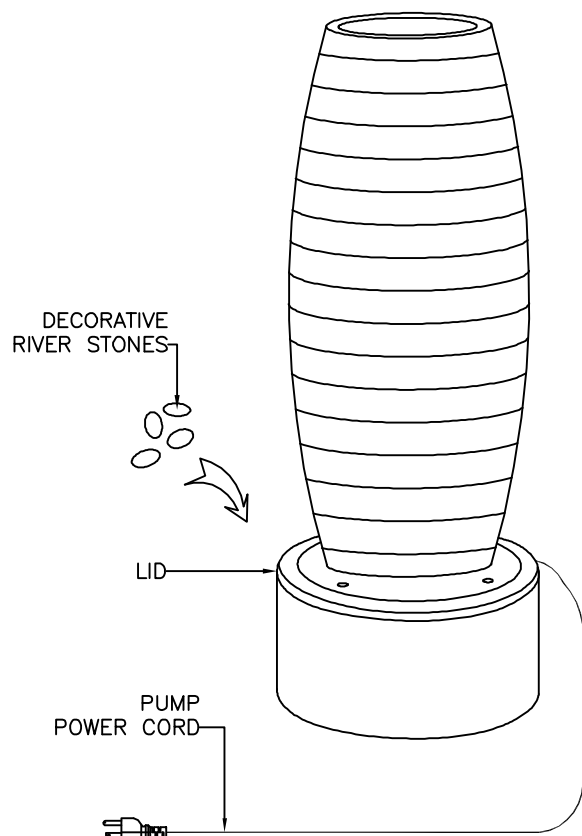

6. PLUG THE PUMP POWER CORD INTO A SOCKET, YOUR FOUNTAIN IS READY FOR USE.

AVAILABLE PART IS:
PUMP1008 (PUMP)

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS FOUNTAIN IS RATED FOR INDOOR/OUTDOOR USE.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.